

SHOCKING LASERS

ULTIMATE LASER COMBAT

FOR AGES
14+

ULTIMATE LASER COMBAT (ULC) provides as much fun and action as a \$2000 laser tag systems, at a fraction of the cost. Its unique shocking design provides a mild shock with each kill shot, adding an entirely new variable and thrill to the game.

CONTAINS: 10 X HAND HELD LASER GUNS: 8 for use at one time, 2 for warranty spares. All guns may be used, warranty coverage provided by spares. No other warranty given.

EACH GUN REQUIRES 3 x AAA batteries (30 total per system). (Not included; to be provided by USER).

WARNING: ULC gun emits an electric shock and is not to be used by anyone suffering heart problems. Shock may interfere with electrical devices such as pacemakers. ULC is a novelty item and not intended for use as a toy or by persons under the age of 14. **DO NOT DROP GUNS; DAMAGE AT USER'S EXPENSE.**

TO INSERT/REPLACE BATTERIES: Previously installed batteries may function throughout your event. Replace batteries when functionality decreases. Unscrew the battery cover on the side of the gun and insert batteries observing the polarity guide. Replace the battery cover and ensure it is securely screwed in place before use. If leaking batteries come in contact with skin or eyes, wash and/or rinse well.

TO USE: Switch ON the ON/OFF switch at the rear of the gun. Aim all guns at each other and hold down the RESET button until all guns are flashing. The guns are now active and ready to play.

 
TO SCORE: To score a hit against another player, aim your laser gun at the sensor on the front of their gun and fire. If you hit them, they will receive an electric shock through the handle of their gun. The guns are accurate up to 25-feet.

TO RELOAD: Once activated, your gun has ONLY 5 SHOTS. Aim carefully! After firing 5 times your gun will fail to work. To reload, slide the reload mechanism to top of the gun backwards and let go. This will reload your gun with 5 more shots. **WARNING:** Once you let go of the reload slide you must WAIT 5 SECONDS before you can shoot again, so take cover!

GAME OVER: When you have been hit three times the lights on your gun will go out and your gun will disable. You are out of the game.

RESTARTING A NEW GAME: To restart a new game, press and hold the RESET button for three seconds.

ENDING PLAY: When you have finished play (and do not intent to play again), switch the ON/OFF switch on all guns to OFF.

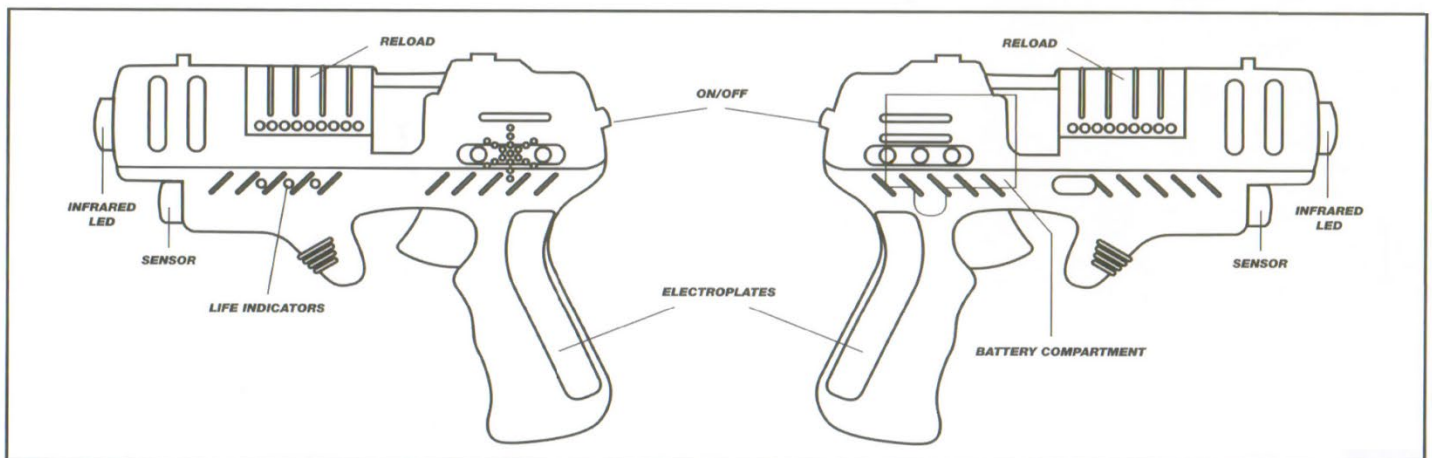

Warning! This is not a toy. Emits an electric shock. Keep out of reach of children. Not suitable for children under 14 years of age.

This product emits an electric shock and may interfere with electrical devices such as pacemakers, do not use if you suffer from epilepsy, heart condition, or any similar or related illness, do not use if you are pregnant. Keep out of reach of children.

